


## Volex #47014RT

Trim for rough-in om014

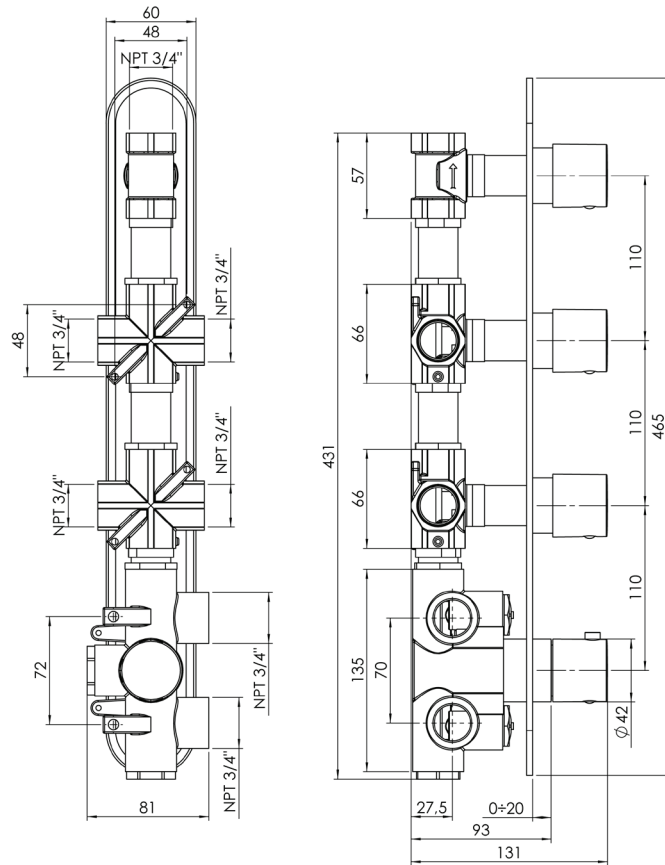

Order om014 rough-in separately  
2<sup>3</sup>/<sub>8</sub>" x 18<sup>1</sup>/<sub>4</sub>"

Finish: Chrome (#99)